

## PosiTrack PXV/PGV Vision Configurator Software

- Downloadable from company website
- Used in conjunction with PXV/PGV reader-to-USB interface cabling
- Enables configuration of over 20 read head settings (adjustment of resolution, switch points, read orientation, etc.)
- Picture-taking capability (for remote troubleshooting)
- Real-time view of all positional information



## PosiTrack PXV/PGV Vision Configurator Software

- Automated storage and retrieval systems
- Overhead material handling
- Floor conveyors
- Lifts
- Rotary turntables
- Stage lighting control

